

FM5000 POWER LOW FOG MACHINE

USER MANUAL

Introduction

Thank you for choosing the FM5000 Low Fog Machine. You now own a rugged and powerful state-of-the-art machine. Prior to use, we suggest that you carefully read all of the instructions. By following the suggestions found in this user manual, you can look forward to the reliable and satisfactory performance of your Low Fog machine for years to come.

Please follow these operation, safety and maintenance instructions to ensure a long and safe life for your fog cooler.

Ideal operating temperature is 3 - 37 degrees Celsius.

After interrupting operation, wait three minutes before starting again.

Keep this device dry.

Keep fog cooler upright. Upend or tilted may damage internal parts

Do not tilt this device when inclination exceed 30 degrees.

Turn off or unplug when not in use.

This machine is not water- or splash-proof. If moisture, water or fog liquid gets inside the housing, immediately clean the unit before using it again.

No user serviceable parts inside. Refer to your dealer or other qualified service personnel.

For adult use only. Low Fog Machine must be installed out of the reach of children. Never leave the unit running unattended.

Locate the fog cooler in a close area. Never cover the unit's vents. The fog cooler is best installed 1 meter away from all objects.

Use only Low Fog Liquid.

If Low Fog machine fails to work properly, discontinue use immediately. Pack the unit securely (preferably in the original packing material) and return it to your dealer for service

DURATION

OUTPUT

yellow light red light green light

yellow button red button green button

INTERVAL

 \bigcirc

Information:

Heat up time: 15mins

DMX512 signal, time and ration controller

Voltage: AC 110v-130v,220-250v 50-60Hz

Heater:5000W

Output: 45000cu.ft/min

size:90*60*42cm

weight:90KG

Wire Cintrol:

1. The machine is prepare to working when the green indicator light is lighting. Pressing the green button, the machine is spray smoke. But the machine will be stop to spray when you loosen the green button.

- When the green and red indicator light are lighting, the machine can spray continuously when you prseeing the red button.
- 3. When the green and yellow indicator light are lighting, you can setup the duration, interval and output by the yellow button.

Unpacking & Inspection

- Open the shipping carton and verify that all equipment necessary to operate the system has arrived intact
- 2. Refer to the "Features" section for information on what items are included with your model. If any equipment is missing contact your dealer immediately
- 3. Before beginning initial setup of your Low Fog Machine, make sure that there is no evident damage caused by transportation. In the event that the unit's housing or cable is damaged, do not plug it in and do not attempt to use it until after contacting your dealer for assistance.

Operation

- 1. Remove all packing materials from Flight-cases. Check that all foam and plastic padding is removed, there are cooler and fog two area.
- 2. There are two lines on the back of fog mahcine. (One is for the fog machine, the other is for the cooler.) Plug power cord into a grounded electrical outlet. Turn the red power switch on rear of unit to "ON" position, the part of fog machine is heating up. The heat up time is about 10 mins. (The green indicator light is lighting when the heat up time enough).
- 3. Then,turn the green power swith on rear of unit to "ON" position, the cooling is working. (you also can turn on the red power switch and green power switch at the same time). Waiting time for cooling is approximately 10-15 minutes. After that, the machine can work.
- 4. Please check the liquid frequently. The machine will be destruct if the machine still working when the liquid is use out.
- 5. During operation, if you experience mechanical noise or no output, unplug immediately. Check power connections and fog machine operation. Wait three minutes and then plug the unit in again after plugging the unit in and turning it on, wait for two minutes. If the problem persists, discontinue operation and return the machine to your dealer.

Maintenance

Clean the water carrier regularly to avoid overflowing.

Clean with a damp cloth.

Store in a dry place.